

# BLINDER® M27 XTREME



## IMPORTANT INFORMATION

- 1 You must disable the Blinder start up tones using the Blinder software.**  
If you don't, the wireless fitting kit will not function correctly.
- 2 We recommend you set the Jamming Time feature to “Constant Jamming”**
- 3 We recommend you set the Alarm Time After Jamming to 1 second.**
- 4 The Parking Sensor Function is disabled by the Wireless Fitting Kit.**  
The standard LASERnode connector cable allows ONLY for the jamming function to operate. It disables the parking sensor option.

If you feel you wish to retain the parking sensor option, you can purchase an alternative connector cable, for \$24.99 that retains the original Blinder 3-way switch. Please note this means that you must position the 3-way switch in a location in the engine bay that you can have easy access to, to allow you switch between parking & jamming functions.

### 5 Standard Cable Connections

